



## **Pre-ride Checks and Service Interval Guide**

Gocycle® G3


March 2016

## Gocycle® Pre-ride Checks

Your front brake is indicated by a yellow ring as shown

Check that your brakes are working properly by pulling both brake levers and ensuring that the levers do not touch the handlebar grip

The quick release should begin to feel harder to close as it reaches a 90-degree position

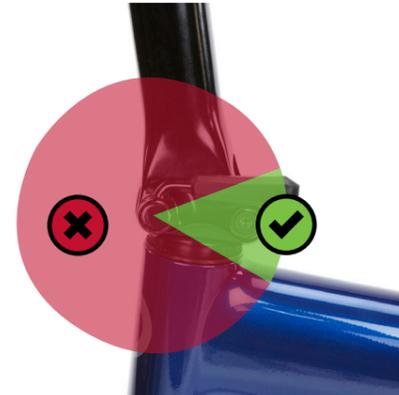

Ensure that the quick release lever remains in the closed position as shown



Check that the minimum insertion mark on the upper seat post has not been exceeded and the seat post is secure



Check that the lower seat post is inserted fully and the minimum insertion mark has not been exceeded



Ensure all three quick release levers are closed and the Hexlock™ is rotated clockwise to the locked position as shown.

## Additional Pre-ride Checks

- ✔ Check front and rear tyre pressure and condition.
- ✔ Check the lights (where fitted). If the product has been fitted with front and rear lights, check that the lights are operating properly and according to the *Gocycle Owner's Manual*.
- ✔ Check that you do not exceed the rider weight limit. This product has been designed with a maximum recommended weight limit of 100kg (220lbs) for the rider, clothing and all luggage, and is intended for use on paved roads. For rider and luggage weight 100-115kg (220-250lbs): riding style, road condition, tyre pressures and luggage position may reduce product service life. Luggage weight should not exceed 10% of total rider and luggage weight. Never exceed rider and luggage weight of 115kg (250lbs) at any time. Exceeding this limit will void all warranties and may result in the product being unsafe for operation.

If you have any reason to believe that your Gocycle is not functioning properly, or that you are aware that your Gocycle has been damaged in any way, do not ride it.

If you answer "no" to any of the questions, you should not ride your Gocycle and should seek advice from an Authorised Gocycle Reseller.

1. Have you read and understood the *Gocycle Owner's Manual*?
2. Are you wearing an approved cycle helmet and, if necessary, other appropriate protective clothing such as protective eye glasses and gloves?
3. Are you visible to other road users?
4. Have you fitted the Gocycle with approved front and rear reflectors for the country of operation?
5. If riding in low light levels, have you fitted the Gocycle with approved front and rear lights?
6. If it is raining or the roads are wet or icy, are you aware that the risks of injury are greater and that you should adjust your riding style to suit the conditions?
7. Have you properly assembled your Gocycle as per the recommended *Gocycle Assembly Guide*?
8. Have you confirmed that both brakes are functioning properly and you know which lever operates the front and rear brakes?
9. Have you confirmed that there are no loose connections or missing bolts and your tyres are filled with air to the recommended tyre pressure?
10. Have you checked [www.gocycle.com/safety](http://www.gocycle.com/safety) for important technical bulletins and/or safety notices that may apply to your Gocycle?

## Gocycle® Service Interval Guide

Recommended Service Interval	Performed by	Distance Ridden	Time
Pre-ride checks	Owner	Before each ride	Before each ride
First service	Authorised Gocycle Reseller	After first 100 miles or 160km	Two months after first ride
Visual inspection	Owner	Every 500 miles or 800km	Every three months
Visit <a href="http://www.gocycle.com/safety">www.gocycle.com/safety</a>	Owner		Every three months
Check and update to latest firmware version	Owner		Every three months
Annual service	Authorised Gocycle Reseller	Every 2000 miles or 3200km	Annually

Note: Any Gocycle purchased in a used condition should have a full service completed by an Authorised Gocycle Reseller prior to riding and a first Authorised Gocycle Reseller Service should follow.

**Please read the Gocycle Owner's Manual completely before riding your Gocycle**